


HYDROSCOPIC WASHER REPLACEMENT INSTRUCTION

The Clean Rain works through a series of hygroscopic washers. These washers slowly expand when exposed to water and in turn activate the valve by pushing it upwards into the seat. Water is then diverted to the outlet.


The hygroscopic washers within the Clean Rain have a long service and should not require replacement. However, should you notice decreased amounts of first flush or increasingly longer re-set periods then your washers may require replacement.




1. When product is installed on wall, remove the outlet to view the base of the diversion chamber. Ensure your switch is turned to off position (when it is released from the body).

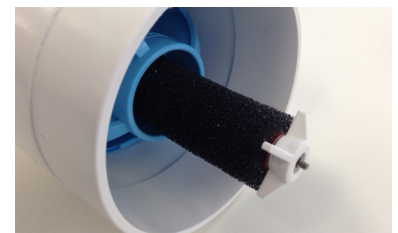


2. View of foam shroud and washers.

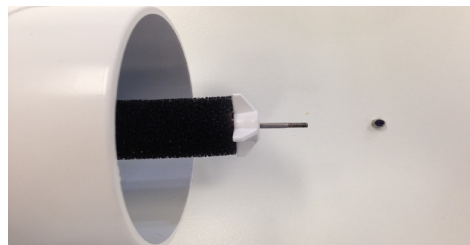

3. Remove nut with pliers.

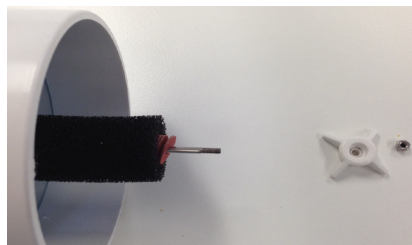

3. Take off the plastic 4 star washer.

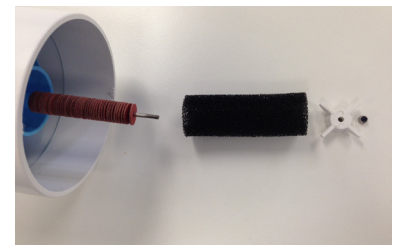

4. Carefully remove black foam shroud. This now provides you a visual of the 46 hydroscopic washers. Slide the washers off the metal rod and replace with new washers.

The black foam can also be rinsed of dirt and debris during this replacement step.



5. Once washers have been replaced, slide foam shroud back onto the metal rod, replace plastic star washer and nut. Ensure nut is tightened with pliers for secure fitment.

6. Replace base outlet and ensure switch is positioned to on mode.